

HOVERCAM PROBLEMS?

CAMERA TURNING OFF?
OR OTHERWISE NOT WORKING CORRECTLY?



AT THE BASE OF
THE HOVERCAM:

1. PUSH & HOLD DOWN
THE **RESET BUTTON**
FOR FIVE (5) SECONDS

(USE A PAPERCLIP WIRE,
OR THE TIP OF A PEN.)

2. QUIT THE HOVERCAM FLEX
SOFTWARE, THEN RESTART IT.